
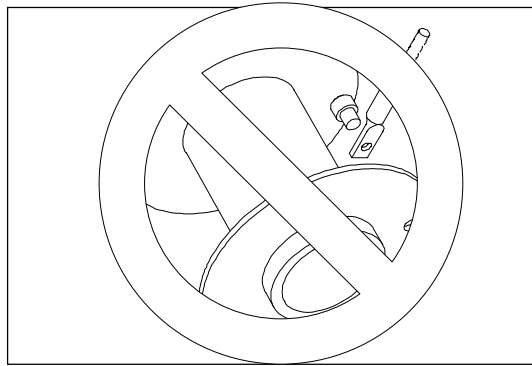


39827-A0

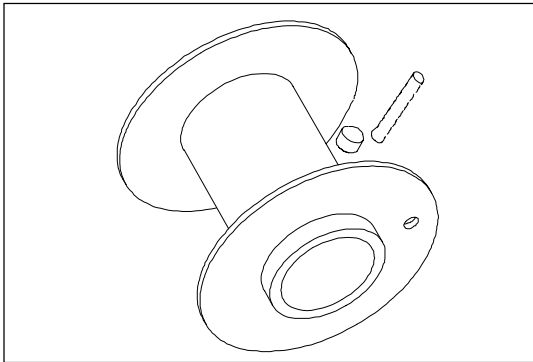

If wire rope has a terminal on the end,  
it must be cut off before installing.